



Ⓞ GB Fitting Instructions:	STYLING BAR
Ⓞ D Montageanleitung:	AUFSATZBÜGEL
Ⓞ NL Montagevoorschrift:	STYLING BAR
Ⓞ F Instructions de montage:	DOUBLE ARCEAU
Ⓞ E Instrucciones de montaje:	BARRA ACERO
Ⓞ I Schema di montaggio:	STYLING BAR
Ⓞ S Manual:	FLAKBÅGE

Ssang Yong Actyon Pick up 2006→



Typ-Nr.: KY/13 Ausf.:A
Best.-Nr.: SSA 1231 (1. Teil)




60 Min.



All rights reserved to modify the text

Typ-Nr.: KY/13 Ausf.:A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
 Herramientas necesarias / Utensile necessarie / Verktuyg somsomkrävs

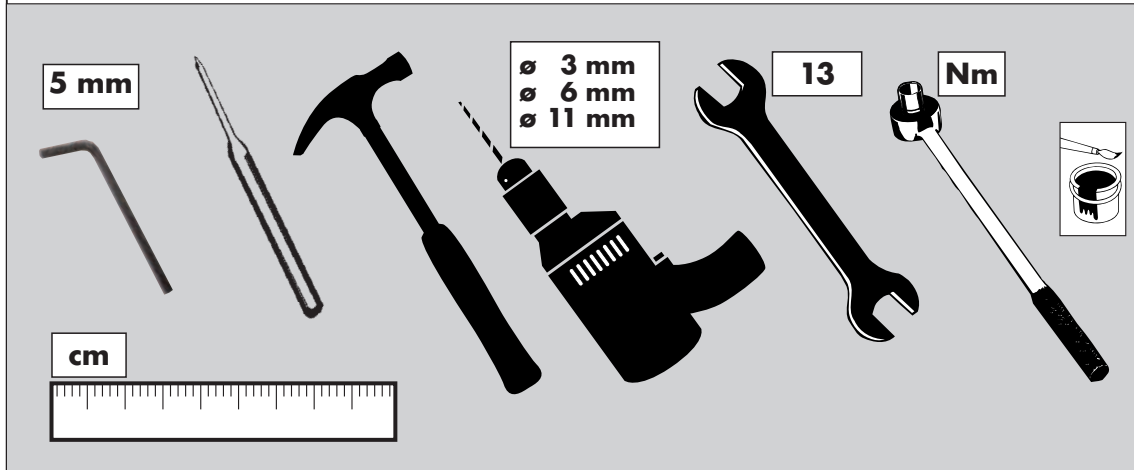

COBRA
 TECHNOLOGY & LIFESTYLE

● Fitting Instructions: STYLING BAR
 ● Montageanleitung: AUFSATZBÜGEL
 ● Montagevoorschrift: STYLING BAR
 ● Instrucciones de montaje: DOUBLE ARCEAU
 ● Instrucciones de montaje: BARRA ACERO
 ● Schema di montaggio: STYLING BAR
 ● Manual: FLAKBÅGE

Ssang Yong Actyon Pick up 2006→

Typ-Nr.: KY/13 Ausf.:A
 Best-Nr.: SSA 1231 (1. Teil)

60 Min.

All rights reserved to modify the text

ISSUE 1 12.07.2007

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
 Lista de accesorios / Lista di pezzo / Artikel lista







1	 Vorderbügel		1 x
2	 Gegenbügel	1 x	6
3	 2 x		7
4	 M 8 x 25	6 x	8
5	 ø 8,1	6 x	9
			13
			Nm
			



Fig. 1

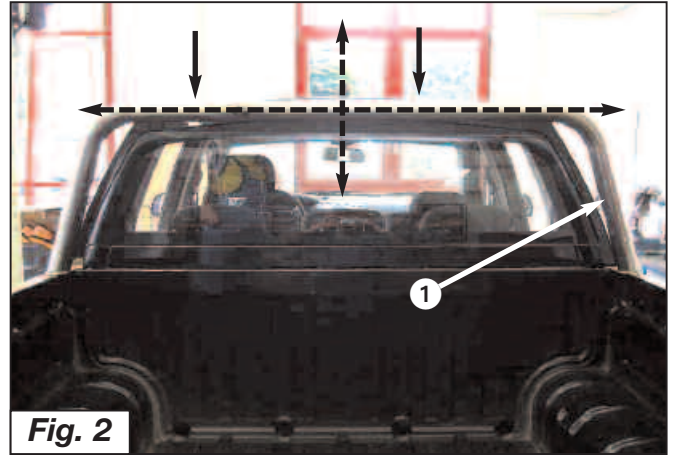


Fig. 2

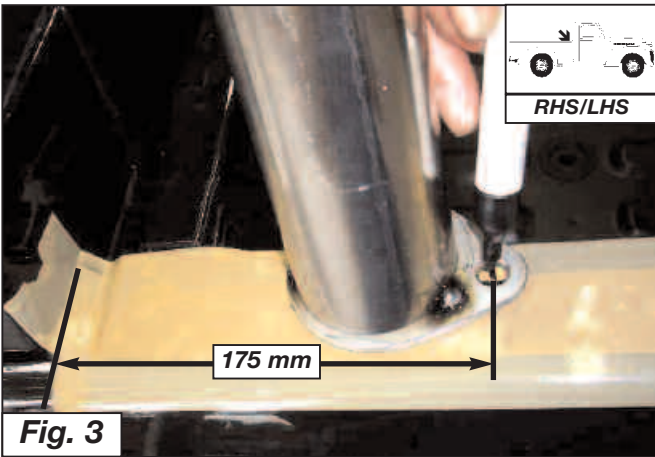


Fig. 3

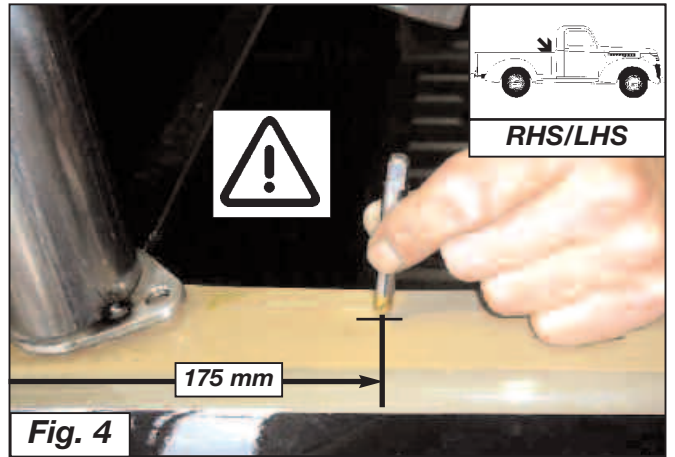


Fig. 4

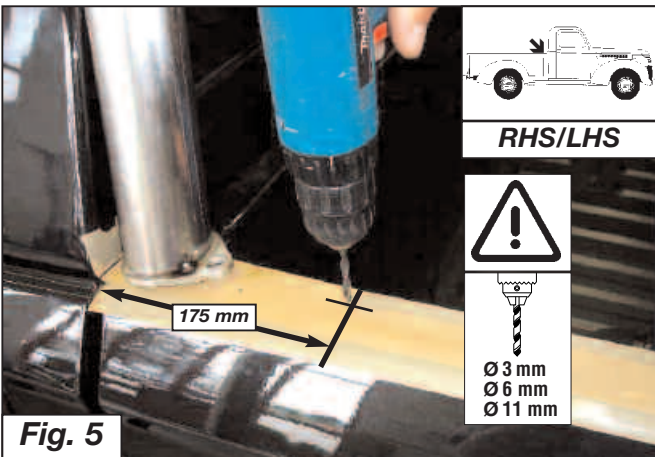


Fig. 5

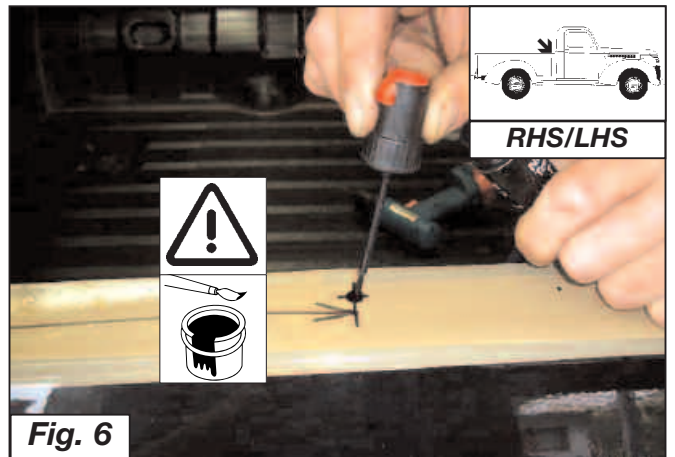


Fig. 6

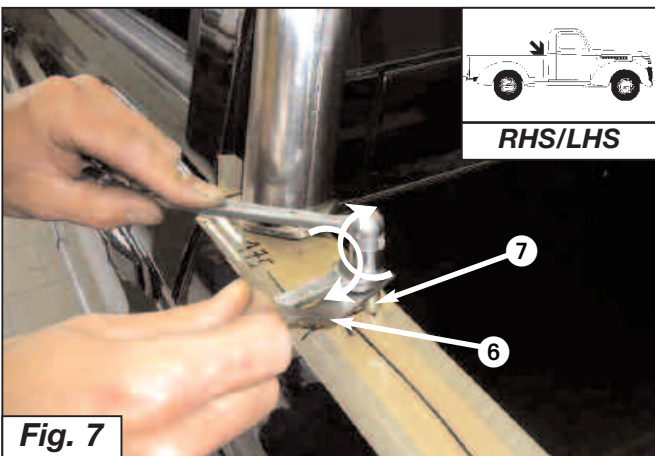


Fig. 7

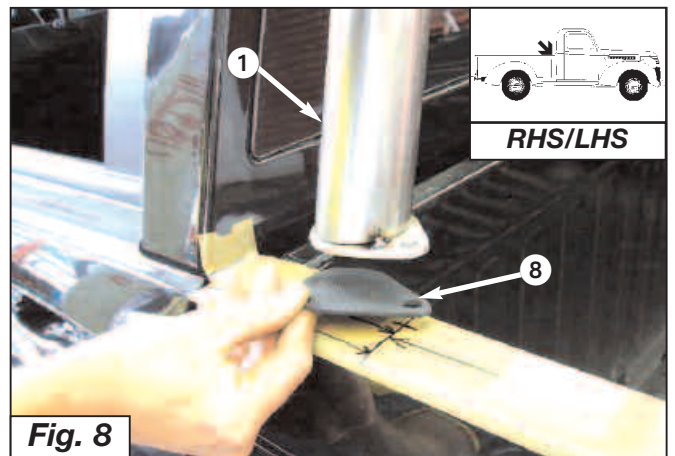


Fig. 8

